

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES  |
|------------------|--|
| 103A             | HEADLIGHT POSITION CONTROL   |
| 103L             | FRONT HEIGHT SENSOR SHUNT  |
| 103M             | REAR HEIGHT SENSOR SHUNT   |
| 104A             | ELECTRIC COOLANT PUMP - CONTROL > COMPUTER                         |
| 107A             | MOBILE PHONE LOUDSPEAKER + SIGNAL                                  |
| 107B             | MOBILE PHONE LOUDSPEAKER - SIGNAL                                  |
| 107D             | TELEPHONE RADIO CUT-OFF SIGNAL                                     |
| 107G             | HANDS FREE TELEPHONE MICROPHONE +                                  |
| 107H             | HANDS FREE TELEPHONE MICROPHONE -                                  |
| 107K             | TELEPHONE AERIAL SIGNAL  |
| 115A             | OIL TEMPERATURE SENSOR - SIGNAL                                    |
| 133B             | INSTRUMENT PANEL CAN H SIGNAL > COMPUTER                           |
| 133C             | INSTRUMENT PANEL CAN L SIGNAL > COMPUTER                           |
| 139A             | DIESEL FUEL FILTER HEATER + CONTROL                                |
| 13AC             | FOOTWELL LIGHTING TIMER + CONTROL                                  |
| 13AM             | RIGHT-HAND COURTESY MIRROR LIGHTING SWITCH                         |
| 13AN             | LEFT-HAND COURTESY MIRROR LIGHTING SWITCH                          |
| 13E              | INTERIOR LIGHTS - CONTROL > TIMER                                  |
| 141B             | INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL LINE 1 SIGNAL   |
| 141C             | INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL LINE 2 SIGNAL   |
| 141D             | INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL LINE 3 SIGNAL   |
| 141G             | INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL LINE 4 SIGNAL   |
| 141H             | INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL LINE 5 SIGNAL   |
| 141K             | INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL COLUMN 1 SIGNAL |
| 141L             | INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL COLUMN 2 SIGNAL |
| 141M             | INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL COLUMN 3 SIGNAL |
| 141N             | INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL COLUMN 4 SIGNAL |
| 141P             | INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL COLUMN 5 SIGNAL |
| 14K              | WINDSCREEN WIPER TIMER LOW SPEED + CONTROL                         |
| 14L              | WINDSCREEN WIPER TIMER HIGH SPEED + CONTROL                        |
| 14M              | WINDSCREEN WIPER PARK POSITION CONTROL > COMPUTER                  |
| 14S              | RAIN SENSOR SERIAL LINE SIGNAL                                     |
| 153A             | POWER ASSISTED STEERING CAN H SIGNAL                               |
| 153B             | POWER ASSISTED STEERING CAN L SIGNAL                               |
| 15A              | HEATED REAR SCREEN WARNING LIGHT CONTROL                           |
| 15LP             | PROTECTED HEATED REAR SCREEN + CONTROL                             |
| 15M              | HEATED REAR SCREEN RELAY - CONTROL                                 |
| 15RP             | PROTECTED HEATED REAR VIEW MIRROR + CONTROL                        |
| 162A             | MOBILE ROOF ARCH FAULT SIGNAL                                      |
| 162B             | AUTOMATIC ROLL HOOP POSITION SIGNAL                                |
| 162C             | - AUTOMATIC ROLL HOOP POSITION                                     |
| 162D             | RIGHT-HAND ROOF ARCH SOLENOID VALVE + COMMAND                      |
| 162G             | LEFT-HAND ROOF ARCH SOLENOID VALVE + COMMAND                       |
| 162H             | - RIGHT-HAND ROOF ARCH SOLENOID VALVE                              |
| 162K             | - LEFT-HAND ROOF ARCH SOLENOID VALVE                               |
| 16A              | WINDSCREEN WASHER PUMP + CONTROL                                   |
| 19E              | MAIN BEAM HEADLIGHTS - CONTROL > DIMMER                            |
| 20AG             | REAR SCREEN MOTOR OPENING AUTHORISED FEED                          |
| 20AH             | OPENING REAR SCREEN STATUS SIGNAL                                  |
| 20AL             | REAR INTERIOR LOCKING CONTROL                                      |
| 20AW             | ONE-TOUCH DOOR LOCKING/UNLOCKING CONTROL                           |
| 20BC             | DRIVER'S DOOR / FUEL FILLER FLAP UNLOCKING MOTOR CONTROL           |
| 20BD             | OPEN FRONT/REAR PASSENGER DOORS MOTOR CONTROL                      |

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES   |
|------------------|---|
| 20BG             | REAR DOORS DEADLOCKING STATUS SIGNAL                              |
| 20BH             | DRIVER'S DOOR / FUEL FILLER FLAP LOCK MOTOR CONTROL               |
| 20BK             | PASSENGER DOORS / REAR DOORS LOCKING MOTOR CONTROL                |
| 20G              | TAILGATE MOTOR OPEN CONTROL                                       |
| 20J              | REAR SCREEN MOTOR OPEN  |
| 20M              | DOOR LOCKING LED  |
| 20S              | TAILGATE MOTOR OPENING AUTHORISED FEED                            |
| 20T              | CHILD SAFETY LED - CONTROL  |
| 20W              | REAR DEADLOCKING MOTOR CONTROL                                    |
| 20X              | FRONT DEADLOCKING MOTOR CONTROL                                   |
| 21A              | DRIVER'S ELECTRIC WINDOW UP CONTROL                               |
| 21B              | DRIVER'S ELECTRIC WINDOW DOWN CONTROL                             |
| 21C              | ONE-TOUCH ELECTRIC WINDOW NORMAL UP - CONTROL                     |
| 21E              | ONE-TOUCH ELECTRIC WINDOW NORMAL DOWN - CONTROL                   |
| 21K              | ANTI-PINCH SUNROOF/ELECTRIC WINDOW SERIAL LINE SIGNAL             |
| 22A              | PASSENGER'S ELECTRIC WINDOW UP CONTROL                            |
| 22B              | PASSENGER'S ELECTRIC WINDOW DOWN CONTROL                          |
| 22C              | FRONT ELECTRIC WINDOW CONTROL 1                                   |
| 22D              | FRONT ELECTRIC WINDOW CONTROL 2                                   |
| 23A              | ELECTRIC WINDOW CONTROL > RIGHT-HAND REAR QUARTER LIGHT CLOSE     |
| 23B              | ELECTRIC WINDOW DOWN CONTROL > RIGHT HAND REAR QUARTER LIGHT OPEN |
| 23C              | ELECTRIC WINDOW UP CONTROL > LEFT HAND REAR QUARTER LIGHT CLOSE   |
| 23D              | ELECTRIC WINDOW DOWN CONTROL > LEFT HAND REAR QUARTER LIGHT OPEN  |
| 23G              | RIGHT HAND REAR ELECTRIC WINDOW CONTROL 1                         |
| 23H              | RIGHT HAND REAR ELECTRIC WINDOW CONTROL 2                         |
| 23J              | LEFT HAND REAR ELECTRIC WINDOW CONTROL 1                          |
| 23K              | LEFT HAND REAR ELECTRIC WINDOW CONTROL 2                          |
| 24A              | REAR SCREEN WASHER PUMP + CONTROL                                 |
| 26AA             | KEYLESS VEHICLE DRIVER'S FRONT DOOR EXTERNAL AERIAL A SIGNAL      |
| 26AB             | KEYLESS VEHICLE DRIVER'S SIDE FRONT DOOR EXTERNAL AERIAL B SIGNAL |
| 26AC             | KEYLESS VEHICLE FRONT PASSENGER DOOR EXTERNAL AERIAL A SIGNAL     |
| 26AD             | KEYLESS VEHICLE FRONT RIGHT DOOR EXTERNAL AERIAL SIGNAL 2         |
| 26AG             | KEYLESS VEHICLE DRIVER'S SIDE REAR DOOR EXTERNAL AERIAL A SIGNAL  |
| 26AH             | KEYLESS VEHICLE DRIVER'S SIDE REAR DOOR EXTERNAL AERIAL B SIGNAL  |
| 26AK             | KEYLESS VEHICLE REAR PASSENGER DOOR EXTERNAL AERIAL A SIGNAL      |
| 26AL             | KEYLESS VEHICLE REAR PASSENGER DOOR EXTERNAL AERIAL B SIGNAL      |
| 26AM             | KEYLESS VEHICLE BOOT LID EXTERNAL AERIAL A SIGNAL                 |
| 26AN             | KEYLESS VEHICLE BOOT LID EXTERNAL AERIAL SIGNAL2                  |
| 26AP             | KEYLESS VEHICLE LOCKING SIGNAL / DRIVER SIDE DOORS SWITCH         |
| 26AQ             | KEYLESS VEHICLE LOCKING SIGNAL / PASSENGER SIDE DOORS SWITCH      |
| 26AR             | KEYLESS VEHICLE LEVEL 2 LOCKING SIGNAL / BOOT LID SWITCH          |
| 26AT             | KEYLESS VEHICLE INTERIOR AERIAL 1 SIGNAL 1                        |
| 26AU             | KEYLESS VEHICLE FRONT INTERIOR AERIAL SIGNAL 2                    |
| 26AV             | KEYLESS VEHICLE INTERIOR AERIAL 2 SIGNAL 1                        |
| 26AW             | KEYLESS VEHICLE INTERIOR AERIAL 2 SIGNAL 2                        |
| 26AX             | KEYLESS VEHICLE INTERIOR AERIAL 3 SIGNAL 1                        |
| 26AY             | KEYLESS VEHICLE CENTRAL INTERIOR AERIAL SIGNAL 2                  |
| 26AZ             | KEYLESS VEHICLE STEERING COLUMN LOCK CAN H SIGNAL                 |
| 26BA             | KEYLESS VEHICLE STEERING COLUMN LOCK CAN L SIGNAL                 |
| 26BC             | CARD LOCATION ELECTROLUMINESCENT DIODE CONTROL                    |
| 26BD             | UCH SYNCHRONISATION / CARD READER SIGNAL                          |
| 26BG             | UCH DATA / CARD READER SIGNAL                                     |
| 26BH             | + CARD READER   |

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES                                 |
|------------------|---|
| 26BK             | - CARD READER                                     |
| 26I              | + STEERING COLUMN LOCK                            |
| 26J              | CONTROL - SAFETY HALL SENSOR                      |
| 26M              | ENGINE RUNNING WARNING LIGHT CONTROL              |
| 26N              | ENGINE START/STOP + SIGNAL                        |
| 26P              | DOOR HANDLE INFRARED SENSOR +                     |
| 26Q              | PASSENGER SIDE DOOR HANDLE INFRARED SENSOR SIGNAL |
| 26S              | DRIVER'S SIDE REAR HANDLE INFRARED SENSOR SIGNAL  |
| 26T              | DRIVER'S HANDLE INFRARED SENSOR SIGNAL            |
| 26X              | CLUTCH - SIGNAL                                   |
| 26Z              | AUTOMATIC TRANSMISSION NEUTRAL + SIGNAL           |
| 27A              | HANDBRAKE WARNING LIGHT - CONTROL                 |
| 28A              | OIL PRESSURE WARNING LIGHT - CONTROL              |
| 2JD              | ALTERNATOR FEED +                                 |
| 2K               | ALTERNATOR CHARGER SIGNAL                         |
| 30A              | BRAKE FLUID LEVEL WARNING LIGHT - CONTROL         |
| 32A              | OIL LEVEL SENSOR SIGNAL 2                         |
| 32B              | OIL LEVEL SENSOR SIGNAL 1                         |
| 33A              | BOOT DOOR SOLENOID VALVE + COMMAND                |
| 33AA             | ROOF COMPUTER EARTH 4                             |
| 33AB             | ROOF COMPUTER EARTH 5                             |
| 33AC             | ROOF COMPUTER EARTH 6                             |
| 33AD             | ROOF COMPUTER EARTH 7                             |
| 33B              | RIGID ROOF SOLENOID VALVE + COMMAND               |
| 33C              | ROOF COMPUTER - COMMAND 1                         |
| 33D              | ROOF HYDRAULIC PUMP RELAY + COMMAND               |
| 33G              | ROOF COMPUTER - COMMAND 2                         |
| 33H              | ROOF HYDRAULIC PUMP MOTOR + COMMAND               |
| 33K              | BOOT DOOR LOCKING MOTOR ON RIGHT-HAND ROOF SIDE   |
| 33L              | BOOT DOOR LOCKING MOTOR ON LEFT-HAND ROOF SIDE    |
| 33M              | BOOT DOOR SIGNAL ON RIGHT-HAND CLOSED ROOF SIDE   |
| 33N              | BOOT DOOR SIGNAL ON LEFT-HAND CLOSED ROOF SIDE    |
| 33P              | ROOF LOCKED SIGNAL                                |
| 33R              | ROOF LOCKABLE SIGNAL                              |
| 33S              | BOOT CLOSED SEPARATOR SIGNAL                      |
| 33T              | SIMULTANEOUS OPENING OF 4 ELECTRIC WINDOWS SIGNAL |
| 33U              | SIMULTANEOUS CLOSURE OF 4 ELECTRIC WINDOWS SIGNAL |
| 33V              | RIGID ROOF OPENING COMMAND                        |
| 33W              | RIGID ROOF CLOSURE CONTROL                        |
| 33X              | BOOT DOOR CYLINDER SENSOR COMMAND                 |
| 33Y              | ROOF SENSOR SIGNAL                                |
| 33Z              | ROOF COMPUTER EARTH 3                             |
| 34A              | LEFT HAND REAR LOUDSPEAKER + SIGNAL               |
| 34AM             | WAVE SEPARATOR AERIAL AMPLIFIER +                 |
| 34AN             | AM/FM AERIAL SIGNAL                               |
| 34AP             | RADIO SATELLITE SIGNAL L0                         |
| 34AQ             | RADIO SATELLITE SIGNAL L1                         |
| 34AR             | RADIO SATELLITE SIGNAL L2                         |
| 34AS             | RADIO SATELLITE IN0 SIGNAL                        |
| 34AT             | RADIO SATELLITE IN1 SIGNAL                        |
| 34AU             | RADIO SATELLITE IN2 SIGNAL                        |
| 34AZ             | COMPACT DISC BUS SIGNAL 1                         |
| 34B              | LEFT HAND REAR LOUDSPEAKER - SIGNAL               |

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES   |
|------------------|---|
| 34BA             | COMPACT DISC BUS SIGNAL 2   |
| 34BB             | - COMPACT DISC BUS  |
| 34BC             | COMPACT DISC + BATTERY  |
| 34BD             | + COMPACT DISC ACCESSORIES  |
| 34BG             | COMPACT DISC AUDIO SIGNAL   |
| 34BH             | - AUDIO 1 COMPACT DISC  |
| 34BK             | - AUDIO 2 COMPACT DISC  |
| 34BL             | COMPACT DISC SHIELDING  |
| 34BM             | + COMPACT DISC REMOTE CONTROL                                     |
| 34BN             | - COMPACT DISC REMOTE CONTROL                                     |
| 34BP             | + COMPACT DISC INFRARED ACCESSORIES                               |
| 34BQ             | COMPACT DISC STOP/START CONTROL                                   |
| 34BR             | RADIO CAN H SHUNT SIGNAL  |
| 34BS             | RADIO CHANNEL SHUNT SIGNAL  |
| 34C              | RIGHT HAND REAR LOUDSPEAKER - SIGNAL                              |
| 34D              | RIGHT HAND REAR LOUDSPEAKER + SIGNAL                              |
| 34DR             | RADIO CANH SIGNAL   |
| 34DS             | RADIO CANL SIGNAL   |
| 34DZ             | MULTIMEDIA 1 CAN H SIGNAL   |
| 34E              | RIGHT HAND FRONT LOUDSPEAKER + SIGNAL                             |
| 34F              | RIGHT HAND FRONT LOUDSPEAKER - SIGNAL                             |
| 34G              | LEFT HAND FRONT LOUDSPEAKER + SIGNAL                              |
| 34GA             | MULTIMEDIA 1 CAN L SIGNAL   |
| 34GB             | MULTIMEDIA 2 CAN H SIGNAL   |
| 34GC             | MULTIMEDIA 2 CAN L SIGNAL   |
| 34GD             | COMMUNICATION START/STOP SIGNAL 1                                 |
| 34H              | LEFT HAND FRONT LOUDSPEAKER - SIGNAL                              |
| 34S              | I2C RADIO (TYPE OF RADIO) DATA BUS (INTERFACE) SIGNAL             |
| 34T              | I2C RADIO (TYPE OF RADIO) CLOCK SIGNAL                            |
| 34U              | I2C RADIO (TYPE OF RADIO) MARKING SIGNAL                          |
| 34V              | I2C RADIO (TYPE OF RADIO) EARTH SCREENING SIGNAL                  |
| 34Z              | RADIO OPERATING SIGNAL  |
| 36A              | REAR WIPER + CONTROL  |
| 36C              | REAR SCREEN WIPER PARK POSITION SWITCH - SIGNAL                   |
| 37AA             | PRE-HEATER PLUG 2 CONTROL   |
| 37AB             | PRE-HEATER PLUG 3 CONTROL   |
| 37AC             | PRE-HEATER PLUG 4 CONTROL   |
| 37Z              | PRE-HEATER PLUG 1 CONTROL   |
| 38AH             | FAN MOTOR SPEED 1 + CONTROL                                       |
| 38AJ             | FAN MOTOR SPEED 2 + CONTROL                                       |
| 38AK             | FAN MOTOR SPEED 3 + CONTROL                                       |
| 38AL             | FAN MOTOR SPEED 4 + CONTROL                                       |
| 38DA             | HEATING FAN ASSEMBLY + CONTROL > AIR CONDITIONING PANEL           |
| 38DB             | HEATER BLOWER + CONTROL > AIR CONDITIONING PANEL                  |
| 38ES             | AIR CONDITIONING WARNING LIGHT - CONTROL                          |
| 38GX             | SUN SENSOR SIGNAL   |
| 38GZ             | INTERIOR TEMPERATURE SENSOR SIGNAL                                |
| 38JA             | RECIRCULATION MOTOR CONTROL 1                                     |
| 38JB             | RECIRCULATION MOTOR CONTROL 2                                     |
| 38JN             | SUN TEMPERATURE HUMIDITY SENSOR ZERO VOLTS                        |
| 38JU             | PASSENGER COMPARTMENT HEATING RESISTANCE CONTROL RELAY 1          |
| 38JV             | PASSENGER COMPARTMENT HEATING RESISTANCE CONTROL RELAY 2PASSENGER |
| 38KY             | AIR DISTRIBUTION MOTOR B2 COIL CONTROL                            |

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES  |
|------------------|--|
| 38KZ             | AIR DISTRIBUTION MOTOR A2 COIL CONTROL                     |
| 38LA             | AIR DISTRIBUTION MOTOR B1 COIL CONTROL                     |
| 38LB             | AIR DISTRIBUTION MOTOR A1 COIL CONTROL                     |
| 38LC             | AIR MIXER MOTOR B2 COIL CONTROL                            |
| 38LD             | AIR MIXER MOTOR A2 COIL CONTROL                            |
| 38LG             | AIR MIXER MOTOR B1 COIL CONTROL                            |
| 38LH             | AIR MIXER MOTOR A1 COIL CONTROL                            |
| 38LL             | PASSENGER COMPARTMENT HEATING RESISTANCE / RELAY 1 CONTROL |
| 38LM             | PASSENGER COMPARTMENT HEATING RESISTANCE CONTROL / RELAY 2 |
| 38LP             | AIR CONDITIONING STOP/START CONTROL                        |
| 38LQ             | FAN ASSEMBLY SPEED 0 SIGNAL                                |
| 38LR             | PASSENGER COMPARTMENT FAN SET SPEED 2 CONTROL              |
| 38R              | AIR CONDITIONING CLUTCH + CONTROL                          |
| 38U              | RHEOSTAT CURSOR  |
| 38X              | REFRIGERANT GAS PRESSURE SENSOR SIGNAL                     |
| 38Y              | REFRIGERANT GAS PRESSURE SENSOR +                          |
| 39A              | HEADLIGHT WASHER PUMP + CONTROL                            |
| 39C              | HEADLIGHT WASHER PUMP MOTOR CONTROL                        |
| 39G              | HEADLIGHT WASHERS RELAY 1 + CONTROL                        |
| 39H              | HEADLIGHT WASHERS RELAY 2 + CONTROL                        |
| 3AA              | INJECTION LOCKING RELAY COIL - CONTROL                     |
| 3ABS             | TURBO UPSTREAM TEMPERATURE SENSOR + SIGNAL                 |
| 3ABT             | - TURBO UPSTREAM TEMPERATURE SENSOR                        |
| 3AC              | FUEL PUMP RELAY COIL - CONTROL                             |
| 3AJB             | THROTTLE MOTOR + CONTROL                                   |
| 3AJC             | THROTTLE MOTOR - CONTROL                                   |
| 3AT              | TURBOCHARGER PRESSURE SOLENOID VALVE CONTROL               |
| 3B               | AIR TEMPERATURE SENSOR + SIGNAL                            |
| 3BB              | CANISTER BLEED SOLENOID VALVE                              |
| 3BG              | ENGINE SPEED SIGNAL > TDC SENSOR                           |
| 3BL              | ENGINE SPEED > TDC SENSOR - SIGNAL                         |
| 3BR              | IGNITION INJECTOR PUMP +                                   |
| 3BS              | IGNITION COIL CONTROL                                      |
| 3C               | COOLANT TEMPERATURE SENSOR + SIGNAL                        |
| 3CK              | UNIT 2 SENSOR -  |
| 3CP              | INJECTION COMPUTER CONTROL > IGNITION POWER MODULE         |
| 3CQ              | CAMSHAFT SENSOR SIGNAL                                     |
| 3CR              | INJECTOR 1 - CONTROL                                       |
| 3CS              | INJECTOR 2 - CONTROL                                       |
| 3CT              | INJECTOR 3 - CONTROL                                       |
| 3CU              | INJECTOR 4 - CONTROL                                       |
| 3CV              | INJECTOR 1 & 4 IGNITION COIL - CONTROL                     |
| 3CW              | INJECTOR 2 & 3 IGNITION COIL - CONTROL                     |
| 3CZ              | INJECTION COMPUTER CONTROL > 1 4 IGNITION POWER MODULE     |
| 3DQ              | PINKING SENSOR -   |
| 3DV              | AIRFLOW SENSOR + SIGNAL                                    |
| 3DW              | AIRFLOW SENSOR - SIGNAL                                    |
| 3EL              | EGR POTENTIOMETER + SIGNAL                                 |
| 3F               | ATMOSPHERIC PRESSURE SENSOR SIGNAL                         |
| 3FAB             | FUEL TEMPERATURE + SIGNAL                                  |
| 3FB              | INJECTION + > PROTECTIVE RELAY                             |
| 3FB1             | INJECTION + > PROTECTIVE RELAY                             |
| 3FB2             | INJECTION + > PROTECTIVE RELAY                             |

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES  |
|------------------|--|
| 3FF              | PRE-HEATER RELAY - CONTROL                                 |
| 3FJ              | INJECTION COMPUTER SENSOR -                                |
| 3FX              | CRUISE CONTROL ON>OFF - CONTROL                            |
| 3FY              | PRE-HEATER RELAY DIAGNOSTIC SIGNAL                         |
| 3GB              | EGR SOLENOID VALVE -                                       |
| 3GC              | EGR SENSOR +   |
| 3GF              | UPSTREAM OXYGEN SENSOR HEATER - CONTROL                    |
| 3GG              | DOWNSTREAM OXYGEN SENSOR HEATER - CONTROL                  |
| 3GH              | UPSTREAM OXYGEN SENSOR EARTH                               |
| 3GJ              | DOWNSTREAM OXYGEN SENSOR EARTH                             |
| 3GK              | UPSTREAM OXYGEN SENSOR SIGNAL                              |
| 3GL              | DOWNSTREAM OXYGEN SENSOR SIGNAL                            |
| 3HF              | LIQUEFIED PETROLEUM GAS ECU SOLENOID VALVE RELAY - CONTROL |
| 3HI              | FUEL PRESSURE CONTROL SOLENOID VALVE - CONTROL             |
| 3HQ              | LPG PRESSURE RELIEF SOLENOID VALVE + CONTROL > COMPUTER    |
| 3JK              | COOLANT TEMPERATURE -                                      |
| 3JM              | EGR SOLENOID VALVE -                                       |
| 3JQ              | AIR TEMPERATURE -  |
| 3JZ              | LIQUEFIED PETROLEUM GAS INJECTOR + CONTROL                 |
| 3KG              | INLET FLAP SOLENOID VALVE - CONTROL                        |
| 3KJ              | AIRFLOW +  |
| 3KQ              | AIR TEMPERATURE SIGNAL                                     |
| 3KW              | INJECTOR 1 CONTROL   |
| 3KX              | INJECTOR 2 CONTROL   |
| 3KY              | INJECTOR 3 CONTROL   |
| 3KZ              | INJECTOR 4 CONTROL   |
| 3L               | + INJECTOR 1   |
| 3LA              | + INJECTOR 2   |
| 3LB              | + INJECTOR 3   |
| 3LC              | + INJECTOR 4   |
| 3LD              | FUEL TEMPERATURE SENSOR -                                  |
| 3LG              | ATMOSPHERIC PRESSURE SENSOR +                              |
| 3LN              | TURBOCHARGER PRESSURE SENSOR -                             |
| 3LP              | TURBOCHARGER PRESSURE SENSOR + SIGNAL                      |
| 3LQ              | TURBOCHARGER PRESSURE SENSOR +                             |
| 3LR              | + LOAD POTENTIOMETER 1                                     |
| 3LS              | LOAD POTENTIOMETER 1 + SIGNAL                              |
| 3LT              | - LOAD POTENTIOMETER 1                                     |
| 3LU              | + LOAD POTENTIOMETER 2                                     |
| 3LV              | - LOAD POTENTIOMETER 2                                     |
| 3LW              | LOAD POTENTIOMETER 2 + SIGNAL                              |
| 3LX              | RAIL FUEL PRESSURE SENSOR +                                |
| 3LY              | RAIL FUEL PRESSURE SENSOR + SIGNAL                         |
| 3LZ              | RAIL FUEL PRESSURE SENSOR -                                |
| 3MG              | TURBO PRESSURE SOLENOID VALVE - CONTROL                    |
| 3MN              | MOTORISED THROTTLE POTENTIOMETER + 5 VOLTS                 |
| 3MO              | MOTORISED THROTTLE POTENTIOMETER SENSOR -                  |
| 3MP              | MOTORISED THROTTLE POTENTIOMETER 1 SIGNAL                  |
| 3MQ              | MOTORISED THROTTLE POTENTIOMETER 2 SIGNAL                  |
| 3MS              | ENGINE CAN H SIGNAL  |
| 3MT              | ENGINE CAN L SIGNAL  |
| 3N               | FUEL PUMP +  |
| 3NU              | LIQUEFIED PETROLEUM GAS PRESSURE SENSOR +                  |

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES                                    |
|------------------|--|
| 3NV              | LIQUEFIED PETROLEUM GAS PRESSURE SENSOR SIGNAL       |
| 3NW              | LIQUEFIED PETROLEUM GAS PRESSURE SENSOR -            |
| 3PC              | CAMSHAFT SHIFTER CONTROL                             |
| 3PD              | SPEED LIMITER ON/OFF CONTROL                         |
| 3PL              | BANK A>B CAMSHAFT SENSOR EARTH                       |
| 3QX              | LIQUEFIED PETROLEUM GAS INJECTOR 1 - CONTROL         |
| 3QY              | LIQUEFIED PETROLEUM GAS INJECTOR 2 - CONTROL         |
| 3QZ              | LIQUEFIED PETROLEUM GAS INJECTOR 3                   |
| 3RA              | LIQUEFIED PETROLEUM GAS INJECTOR 4 - CONTROL         |
| 3RB              | LIQUEFIED PETROLEUM GAS ACTUATOR CONTROL RELAY       |
| 3RC              | LIQUEFIED PETROLEUM GAS ON/OFF SIGNAL                |
| 3RD              | LIQUEFIED PETROLEUM GAS GAUGE SENDER SIGNAL          |
| 3S               | PINKING SENSOR 1 + SIGNAL > FRONT                    |
| 3SM              | MOTOR 2 CAN H SIGNAL                                 |
| 3SN              | MOTOR 2 CAN L SIGNAL                                 |
| 3SV              | INLET CAMSHAFT SENSOR SIGNAL                         |
| 3SX              | - INLET CAMSHAFT SENSOR                              |
| 3SZ              | VARIABLE INLET CAMSHAFT CONTROL                      |
| 3TD              | PARTICLE FILTER UPSTREAM TEMPERATURE SENSOR SIGNAL   |
| 3TG              | PARTICLE FILTER DOWNSTREAM TEMPERATURE SENSOR SIGNAL |
| 3TK              | POLLEN FILTER UPSTREAM PRESSURE SENSOR -             |
| 3TL              | PARTICLE FILTER DIFFERENTIAL PRESSURE SIGNAL         |
| 3VG              | TURBOCHARGER COOLANT PUMP RELAY CONTROL              |
| 3VH              | + TURBOCHARGER BEARING COOLANT PUMP                  |
| 3VK              | LPG TANK SOLENOID VALVE CONTROL                      |
| 3VM              | AIR INTAKE FLAP FAULT FINDING                        |
| 3VN              | CONTROL - AIR INTAKE FLAP                            |
| 3VP              | CONTROL + GAS RECIRCULATION MOTOR                    |
| 3VQ              | CONTROL - GAS RECIRCULATION MOTOR                    |
| 3WP              | LPG TANK SOLENOID VALVE RELAY CONTROL                |
| 3WT              | WATER IN DIESEL DETECTION SENSOR SIGNAL              |
| 3WU              | WATER IN DIESEL DETECTION - SENSOR                   |
| 3WV              | - FLOWMETER  |
| 3XC              | - NATURAL GAS PRESSURE SENSOR URBAN DRIVING          |
| 3YB              | LIQUID PETROLEUM GAS GAUGE 5 V SIGNAL                |
| 3YC              | - OIL VAPOUR REHEATER                                |
| 40A              | DRIVER'S REAR VIEW MIRROR RIGHT>LEFT CONTROL         |
| 40B              | PASSENGER REAR VIEW MIRROR UP/DOWN CONTROL           |
| 40C              | DRIVER'S REAR VIEW MIRROR UP/DOWN CONTROL            |
| 40D              | PASSENGER REAR VIEW MIRROR RIGHT>LEFT CONTROL        |
| 40E              | REAR VIEW MIRROR MOTOR COMMON                        |
| 40W              | REAR-VIEW MIRROR FOLD IN CONTROL                     |
| 40X              | REAR-VIEW MIRROR FOLD OUT CONTROL                    |
| 41A              | FUEL LEVEL SENDER + SIGNAL                           |
| 41B              | FUEL LEVEL -   |
| 46AA             | NAVIGATION LOUDSPEAKER + SIGNAL                      |
| 46AB             | NAVIGATION LOUDSPEAKER - SIGNAL                      |
| 46AD             | NAVIGATION ON/OFF CONTROL                            |
| 46AZ             | NAVIGATION AUDIO + SIGNAL                            |
| 46BA             | NAVIGATION AUDIO - SIGNAL                            |
| 46BB             | NAVIGATION CAN H SIGNAL 1                            |
| 46BC             | NAVIGATION CAN L SIGNAL                              |
| 46BG             | - DISPLAY 1  |

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES   |
|------------------|---|
| 46BH             | - DISPLAY 2   |
| 46BK             | - DISPLAY 3   |
| 46BL             | NAVIGATION SHUNT H SIGNAL                                   |
| 46BM             | NAVIGATION SHUNT L SIGNAL                                   |
| 46CB             | NAVIGATION AERIAL SIGNAL                                    |
| 46G              | DISPLAY GREEN VIDEO SIGNAL > COMPUTER                       |
| 46H              | DISPLAY BLUE VIDEO SIGNAL > COMPUTER                        |
| 46K              | DISPLAY VIDEO RED SIGNAL > COMPUTER                         |
| 46L              | VIDEO DISPLAY ZERO VOLTS SIGNAL > COMPUTER                  |
| 46M              | DISPLAY 1 + > COMPUTER                                      |
| 46N              | DISPLAY 2 + > COMPUTER                                      |
| 46Y              | BRIGHTNESS + CONTROL  |
| 47C              | EXTERNAL TEMPERATURE SENSOR + SIGNAL                        |
| 47D              | EXTERNAL TEMPERATURE SENSOR ZERO VOLTS SIGNAL               |
| 47F              | VEHICLE SPEED SIGNAL  |
| 47Q              | OIL TEMPERATURE SENSOR + SIGNAL                             |
| 47Z              | EXTERNAL TEMPERATURE / DISPLAY SIGNAL                       |
| 49B              | FAN + CONTROL   |
| 49L              | FAN LOW SPEED RESISTANCE + CONTROL                          |
| 49Q              | - FAN HIGH SPEED CONTROL RELAY                              |
| 49R              | FAN HIGH SPEED FEED   |
| 4AQ              | ELECTRONIC STABILITY PROGRAM ON/OFF SWITCH - CONTROL        |
| 4BZ              | YAW SENSOR TEST SIGNAL (DIRECTIONAL STABILITY)              |
| 4C               | LEFT HAND FRONT WHEEL SENSOR SIGNAL                         |
| 4CV              | YAW SENSOR REFERENCE SIGNAL (DIRECTIONAL STABILITY)         |
| 4CW              | YAW SENSOR SIGNAL (DIRECTIONAL STABILITY)                   |
| 4CX              | LATERAL ACCELERATION SENSOR SIGNAL                          |
| 4CY              | YAW SENSOR - (DIRECTIONAL STABILITY) > LATERAL ACCELERATION |
| 4DM              | ANTI-LOCK BRAKING SYSTEM UPPER CAN SIGNAL                   |
| 4DN              | ANTI-LOCK BRAKING SYSTEM LOWER CAN SIGNAL                   |
| 4E               | LEFT HAND FRONT WHEEL SENSOR +                              |
| 4G               | LEFT HAND REAR WHEEL SENSOR SIGNAL                          |
| 4GJ              | BRAKE LIGHTS ON CONTROL RELAY                               |
| 4H               | LEFT HAND REAR WHEEL SENSOR +                               |
| 4M               | RIGHT HAND FRONT WHEEL SENSOR SIGNAL                        |
| 4N               | RIGHT HAND FRONT WHEEL SENSOR +                             |
| 4S               | RIGHT HAND REAR WHEEL SENSOR SIGNAL                         |
| 4T               | RIGHT HAND REAR WHEEL SENSOR +                              |
| 52D              | DIGITAL CONTROL EARTH                                       |
| 52G              | 1-BIT DIGITAL CONTROL                                       |
| 52H              | 2-BIT DIGITAL CONTROL                                       |
| 52J              | 3-BIT DIGITAL CONTROL                                       |
| 58D              | DISPLAY ON/OFF SIGNAL                                       |
| 5A               | BRAKE PEDAL SWITCH + SIGNAL                                 |
| 5AU              | SEQUENCE SOLENOID VALVE +                                   |
| 5AV              | SEQUENCE SOLENOID VALVE 1 -                                 |
| 5AW              | SEQUENCE SOLENOID VALVE 2 -                                 |
| 5AX              | SEQUENCE SOLENOID VALVE 3 -                                 |
| 5AY              | SEQUENCE SOLENOID VALVE 4 -                                 |
| 5AZ              | SEQUENCE SOLENOID VALVE 5 -                                 |
| 5BA              | MODULATING SOLENOID VALVE +                                 |
| 5BB              | SEQUENCE SOLENOID VALVE 6 -                                 |
| 5BC              | PRESSURE SOLENOID VALVE 1 -                                 |



# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES   |
|------------------|---|
| 5BX              | BRIDGING MODULATING SOLENOID VALVE                        |
| 5CQ              | AUTOMATIC GEARBOX DISPLAY SIGNAL                          |
| 5DA              | GEARBOX INPUT SPEED SENSOR + SIGNAL                       |
| 5DB              | GEARBOX INPUT SPEED SENSOR - SIGNAL                       |
| 5DD              | EXCHANGER FLOW SENSOR CONTROL SOLENOID VALVE +            |
| 5DG              | MULTIFUNCTION SWITCH SIGNAL 2                             |
| 5DH              | MULTIFUNCTION SWITCH SIGNAL 3                             |
| 5DJ              | MULTIFUNCTION SWITCH SIGNAL 4                             |
| 5DK              | MULTIFUNCTION SWITCH - > AUTOMATIC TRANSMISSION COMPUTER  |
| 5DL              | MODULATING SOLENOID VALVE 3                               |
| 5DM              | MODULATING SOLENOID VALVE 4                               |
| 5DN              | EXCHANGER FLOW SENSOR SOLENOID VALVE - CONTROL            |
| 5DU              | GEAR LEVER LOCKING - CONTROL                              |
| 5FM              | LOWER CONTACT MULTIFUNCTION PUSH BUTTON CONTROL           |
| 5H               | N+1 PUSH BUTTON CONTROL                                   |
| 5U               | LINE PRESSURE SENSOR +                                    |
| 5V               | LINE PRESSURE SENSOR -                                    |
| 5W               | LINE PRESSURE SENSOR + SIGNAL                             |
| 60AF             | PASSENGER'S SIDE SATELLITE + SIGNAL                       |
| 60AG             | DRIVER'S SIDE FRONT SATELLITE + SIGNAL                    |
| 60AH             | DRIVER'S SIDE SATELLITE - SIGNAL                          |
| 60AJ             | PASSENGER'S SIDE FRONT SATELLITE - SIGNAL                 |
| 60AK             | DRIVER'S LAP STRAP PRETENSIONER + CONTROL                 |
| 60AL             | DRIVER'S LAP STRAP PRETENSIONER - CONTROL                 |
| 60AM             | LEVEL 1 DRIVER'S FRONT AIR BAG + CONTROL                  |
| 60AN             | LEVEL 1 DRIVER'S FRONT AIR BAG - CONTROL                  |
| 60AP             | LEVEL 2 DRIVER'S FRONT AIR BAG + CONTROL                  |
| 60AQ             | LEVEL 2 DRIVER'S FRONT AIR BAG - CONTROL                  |
| 60AR             | DRIVER'S SIDE THORAX AIR BAG + CONTROL                    |
| 60AS             | - DRIVER'S SIDE THORAX AIR BAG CONTROL                    |
| 60AV             | DRIVER'S SIDE REAR INERTIA REEL PRETENSIONER + CONTROL    |
| 60AW             | DRIVER'S SIDE REAR INERTIA REEL PRETENSIONER - CONTROL    |
| 60AX             | LEFT HAND REAR SIDE AIR BAG + CONTROL                     |
| 60AY             | DRIVER'S SIDE REAR SIDE THORAX AIR BAG - CONTROL          |
| 60AZ             | PASSENGER LAP BELT PRETENSIONER + CONTROL                 |
| 60B              | PASSENGER'S PRETENSIONER + SIGNAL                         |
| 60BA             | PASSENGER LAP BELT PRETENSIONER - CONTROL                 |
| 60BB             | PASSENGER'S SIDE THORAX AIR BAG + CONTROL                 |
| 60BC             | PASSENGER'S SIDE THORAX AIR BAG - CONTROL                 |
| 60BG             | PASSENGER'S SIDE REAR INERTIA REEL PRETENSIONER + CONTROL |
| 60BH             | PASSENGER'S SIDE REAR INERTIA REEL PRETENSIONER - CONTROL |
| 60BK             | PASSENGER'S SIDE REAR SIDE THORAX AIR BAG + CONTROL       |
| 60BL             | PASSENGER'S SIDE REAR SIDE AIR BAG - CONTROL              |
| 60BP             | DRIVER'S SEAT POSITION SIGNAL                             |
| 60BY             | DRIVER'S HEAD CURTAIN AIR BAG + CONTROL                   |
| 60BZ             | DRIVER'S HEAD CURTAIN AIR BAG - CONTROL                   |
| 60C              | PASSENGER'S PRETENSIONER _ SIGNAL                         |
| 60CA             | PASSENGER'S HEAD CURTAIN AIR BAG + CONTROL                |
| 60CB             | PASSENGER'S HEAD CURTAIN AIR BAG - CONTROL                |
| 60CL             | DRIVER'S SEAT POSITION EARTH                              |
| 60D              | DRIVER'S PRETENSIONER + SIGNAL                            |
| 60DS             | PASSENGER AIR BAG INHIBITOR KEY SIGNAL                    |
| 60DT             | - PASSENGER AIR BAG INHIBITOR KEY                         |

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES  |
|------------------|--|
| 60DU             | DRIVER'S SEATBELT WARNING SIGNAL                                     |
| 60DV             | DRIVER'S SEATBELT WARNING EARTH                                      |
| 60E              | DRIVER'S PRETENSIONER - SIGNAL                                       |
| 60H              | PASSENGER EURO BAG + SIGNAL  |
| 60K              | PASSENGER'S FRONT AIR BAG LEVEL 1 - CONTROL                          |
| 60L              | LEVEL 2 PASSENGER'S FRONT AIR BAG + CONTROL                          |
| 60M              | LEVEL 2 PASSENGER'S FRONT AIR BAG - CONTROL                          |
| 64C              | LEFT HAND TURN SIGNAL LIGHTS CONTROL                                 |
| 64D              | RIGHT HAND TURN SIGNAL LIGHTS CONTROL                                |
| 64F              | HAZARD WARNING LIGHTS INDICATOR LIGHT + CONTROL                      |
| 64Q              | FLASHER UNIT TIMER - CONTROL   |
| 65A              | BRAKE LIGHTS + CONTROL   |
| 65G              | BRAKE LIGHT CONTROL > RELAY  |
| 67A              | HORN + CONTROL   |
| 79F              | HEATED SEAT WARNING LIGHT CONTROL                                    |
| 79K              | LEFT HAND HEATED SEAT RELAY + CONTROL                                |
| 79L              | RIGHT HAND HEATED SEAT RELAY + CONTROL                               |
| 79M              | DRIVER'S HEATED SEAT COVER CONTROL                                   |
| 79N              | PASSENGER HEATED SEAT COVER CONTROL                                  |
| 79P              | RIGHT-HAND HEATED SEAT COVER CONTROL                                 |
| 79Q              | LEFT-HAND HEATED SEAT COVER CONTROL                                  |
| 80A              | BONNET SWITCH - SIGNAL   |
| 80D              | ULTRASONIC SENSOR SIGNAL   |
| 80DA             | DRIVER'S SIDE FRONT ULTRASOUND DETECTION SIGNAL                      |
| 80E              | ALARM STANDBY WARNING LIGHT CONTROL                                  |
| 80T              | ENGINE IMMOBILISER WARNING LIGHT - CONTROL                           |
| 86D              | DECLUTCH + SIGNAL  |
| 86G              | CRUISE CONTROL PROGRAMMING CONTROL                                   |
| 86M              | CRUISE CONTROL PROGRAMMING RETURN SIGNAL                             |
| 87A              | LEFT HAND REAR 1st POSITION SWITCH - SIGNAL                          |
| 87B              | RIGHT HAND REAR 1st POSITION SWITCH - SIGNAL                         |
| 87G              | PASSENGER'S 1st POSITION SWITCH - SIGNAL                             |
| 87H              | DRIVER'S 1st POSITION SWITCH - SIGNAL                                |
| 87T              | BOOT LID POSITION SWITCH 1 SIGNAL                                    |
| 8E               | + FRONT LEFT-HAND FOG LIGHTS > RESISTANCE                            |
| 8F               | + FRONT RIGHT-HAND FOG LIGHTS > RESISTANCE                           |
| 9P               | PROTECTED REAR FOG LIGHTS + CONTROL                                  |
| A1               | + AFTER IGNITION ELECTRIC WINDOW FUSE > RELAY                        |
| AP11             | PROTECTED + AFTER IGNITION REVERSING LIGHTS FUSE                     |
| AP15             | PROTECTED + AFTER IGNITION ENGINE FUNCTIONS FUSE                     |
| AP1A             | ROOF FUSE PROTECTED + AFTER IGNITION                                 |
| AP30             | PROTECTED + AFTER IGNITION PASSENGER ELECTRIC WINDOW FUSE            |
| AP31             | PROTECTED + AFTER IGNITION LPG COMPUTER FUSE                         |
| AP4              | PROTECTED + AFTER IGNITION AUTOMATIC TRANSMISSION FUSE               |
| AP43             | PROTECTED + AFTER IGNITION FUSE                                      |
| AP44             | POWER ASSISTED STEERING ECU + AFTER IGNITION FEED FUSE PROTECTION    |
| APCB             | + AFTER IGNITION PROTECTED / COLUMN LOCK FUSE CONTACT CLOSED AT REST |
| BCP3             | PROTECTED + BATTERY FEED CIRCUIT BREAKER INTERIOR LIGHT FUSE         |
| BP11             | PROTECTED + BATTERY FEED > PASSENGER COMPARTMENT 1                   |
| BP12             | PROTECTED + BATTERY FEED > PASSENGER COMPARTMENT 2                   |
| BP14             | PROTECTED + BATTERY FEED > ABS                                       |
| BP25             | PROTECTED + BATTERY FEED REAR SCREEN WIPER                           |
| BP27             | PROTECTED + BATTERY FEED > ENGINE FUNCTIONS                          |

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES   |
|------------------|---|
| BP3              | PROTECTED + BATTERY FEED ELECTRIC DOOR LOCKING                              |
| BP31             | PROTECTED + BATTERY FEED INJECTOR FUSE > FUEL PUMP                          |
| BP32             | PROTECTED + BATTERY FEED HORN FUSE  |
| BP35             | PROTECTED + BATTERY FEED PRE-HEATER UNIT FUSE                               |
| BP42             | PROTECTED + BATTERY FEED > AUTOMATIC TRANSMISSION COMPUTER                  |
| BP48             | PROTECTED + BATTERY FEED > ELECTRIC WINDOW                                  |
| BP51             | PROTECTED + BATTERY FEED > HOOD   |
| BP55             | DRIVER'S ONE-TOUCH ELECTRIC WINDOW FUSE PROTECTED + BATTERY FEED            |
| BP70             | PROTECTED + BATTERY FEED > PASSENGER'S ONE-TOUCH FRONT ELECTRIC WINDOW FUSE |
| BP73             | PROTECTED + BATTERY FEED FAN FUSE   |
| BP77             | BATTERY PROTECTED + FEED > UCH  |
| BP8              | PROTECTED + BATTERY FEED > ANTI-LOCK BRAKING SYSTEM MOTOR                   |
| BP81             | PROTECTED + BATTERY FEED > ELECTRIC POWER-ASSISTED STEERING                 |
| BP87             | REAR ELECTRIC WINDOWS FUSE PROTECTED + BATTERY FEED                         |
| BP9              | PROTECTED + BATTERY FEED ADDITIONAL HEATER FUSE                             |
| BP91             | PROTECTED + BATTERY FEED ADDITIONAL HEATER FUSE                             |
| BP93             | + BATTERY PROTECTED SUNROOF   |
| BPDA             | PROTECTED + BATTERY FEED > ALTERNATOR STARTING                              |
| BPR1             | + BATTERY FEED > RELAY  |
| BPS1             | + BATTERY SAFETY PROTECTED  |
| BPT              | PROTECTED + BATTERY FEED TIMER  |
| BPT2             | + BATTERY PROTECTED TIMED LIGHTING  |
| CANH             | DIAGNOSTIC CAN H SIGNAL   |
| CANL             | DIAGNOSTIC CAN L SIGNAL   |
| CPD              | PROTECTED RIGHT HAND DIPPED BEAM HEADLIGHT +                                |
| CPG              | PROTECTED LEFT HAND DIPPED BEAM HEADLIGHT +                                 |
| D                | STARTER +   |
| H66P             | REVERSING LIGHTS + CONTROL  |
| H7               | REV COUNTER > TOP DEAD CENTRE > COIL > COMPUTER ALTERNATOR SIGNAL           |
| HK               | DIAGNOSTIC SIGNAL K   |
| LPD              | PROTECTED RIGHT HAND SIDE LIGHT +   |
| LPG              | PROTECTED LEFT HAND SIDE LIGHT +  |
| M                | EARTH   |
| MAH              | ANTI-LOCK BRAKING SYSTEM ELECTRICAL EARTH                                   |
| MAK              | ADDITIONAL HEATING ELECTRICAL EARTH   |
| MAL              | ELECTRIC POWER ASSISTED STEERING EARTH STRAP                                |
| MAM              | DASHBOARD LEFT-HAND CROSS MEMBER ELECTRICAL EARTH                           |
| MAN              | DASHBOARD RIGHT-HAND CROSS MEMBER ELECTRICAL EARTH                          |
| MAO              | DASHBOARD CROSS MEMBER RADIO EARTH  |
| MAQ              | REAR RIGHT-HAND END PANEL ELECTRICAL EARTH                                  |
| MAS              | FRONT LEFT-HAND SIDE MEMBER ELECTRONIC EARTH                                |
| MAW              | REAR RIGHT-HAND WHEEL ARCH RADIO ELECTRICAL EARTH                           |
| ME               | BODYWORK GENERAL ELECTRICAL EARTH   |
| MY               | BOOT ELECTRICAL EARTH   |
| MZ               | REAR END PANEL ELECTRICAL EARTH   |
| N                | ELECTRONIC EARTH  |
| NAM              | UPPER LEFT-HAND CROSS MEMBER ELECTRONIC EARTH                               |
| NAP              | TUNNEL ELECTRONIC EARTH   |
| NE               | REAR LEFT-HAND ELECTRONIC EARTH   |
| RPD              | RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT +                                  |
| RPG              | LEFT HAND PROTECTED MAIN BEAM HEADLIGHT +                                   |
| S                | + ACCESSORIES FEED  |
| SP15             | PROTECTED + ACCESSORIES FEED FUSE   |

# LIST OF CONNECTIONS

| CONNECTION CODES | CONNECTION TITLES   |
|------------------|---|
| SP16             | PROTECTED + ACCESSORIES FEED / ACCESSORIES FEED FUSE SUPPLY |
| SP17             | PROTECTED + ACCESSORIES FEED > BRAKE LIGHTS FUSE            |
| SP2              | PROTECTED + ACCESSORIES > RADIO                             |
| SP3              | PROTECTED + ACCESSORIES > HEATER                            |
| SP4G             | CIGARETTE LIGHTER PROTECTED + ACCESSORIES FEED              |
| TB1              | PINKING SENSOR SCREENING BRAID                              |
| TB13             | AM/FM AERIAL SHIELDING                                      |
| TB15             | NAVIGATION AERIAL SHIELDING                                 |
| TB16             | TELEPHONE AERIAL SHIELDING                                  |
| XXXX             | EMPTY CONNECTION  |