

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
101	CIGARETTE LIGHTER
103	ALTERNATOR
105	MAIN ELECTROMAGNETIC HORN
107	BATTERY
118	ANTI-LOCK BRAKING SYSTEM COMPUTER
119	AUTOMATIC TRANSMISSION COMPUTER
120	INJECTION COMPUTER
123	CENTRAL DOOR LOCKING CONTROL
129	GEAR SELECTOR CONTROL
130	REAR RIGHT-HAND ELECTRIC WINDOW CONTROL
131	REAR LEFT-HAND ELECTRIC WINDOW CONTROL
133	PASSENGER'S SIDE ELECTRIC WINDOW CONTROL
134	ELECTRIC REAR-VIEW MIRROR CONTROL
135	REAR WINDOW WINDER LOCKING SWITCH
138	REAR RIGHT DOOR ELECTRIC LOCKING
139	REAR LEFT DOOR ELECTRIC LOCKING
140	DRIVER'S DOOR ELECTRIC LOCKING
141	CENTRAL LOCKING FOR PASSENGER DOOR
146	PINKING SENSOR 1
147	ATMOSPHERIC PRESSURE SENSOR
149	TDC SENSOR
150	RIGHT REAR WHEEL SENSOR
151	LEFT REAR WHEEL SENSOR
152	RIGHT FRONT WHEEL SENSOR
153	LEFT FRONT WHEEL SENSOR
155	REVERSING LIGHTS SWITCH
156	HANDBRAKE SWITCH
160	BRAKE SWITCH
163	STARTER
164	COLD AIR BLOWER
165	LUGGAGE COMPARTMENT LIGHTING
166	RIGHT-HAND REGISTRATION PLATE LIGHTING
167	LEFT-HAND REGISTRATION PLATE LIGHTING
168	GLOVE COMPARTMENT LIGHT
169	EGR SOLENOID VALVE
171	AIR CONDITIONING CLUTCH
172	RIGHT REAR LIGHT
173	LEFT REAR LIGHT
176	RIGHT FRONT FOGLIGHT
177	LEFT FRONT FOGLIGHT
188	COOLING FAN UNIT
189	RIGHT REAR SPEAKER
190	LEFT REAR SPEAKER
191	FRONT RIGHT DOOR SPEAKER
192	FRONT LEFT DOOR SPEAKER
193	INJECTOR 1
194	INJECTOR 2
195	INJECTOR 3
196	INJECTOR 4
199	FUEL GAUGE
200	REAR SCREEN DE-ICING
201	REAR RIGHT-HAND WINDOW MOTOR
202	REAR LEFT-HAND WINDOW MOTOR

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
203	DRIVER'S WINDOW MOTOR
204	PASSENGER ELECTRIC WINDOW MOTOR
205	PRESSURE SWITCH
207	BRAKE FLUID MIN LEVEL SENSOR
211	REAR SCREEN WIPER MOTOR
212	WINDSCREEN WIPER MOTOR
213	FRONT COURTESY LIGHT
219	HEADLIGHT WASHER PUMP
225	DIAGNOSTIC SOCKET
226	RIGHT-HAND HEADLIGHT
227	LEFT-HAND HEADLIGHT
234	FAN ASSEMBLY RELAY
236	FUEL PUMP RELAY
238	INJECTION LOCKING RELAY
239	DRIVER'S ELECTRIC REAR-VIEW MIRROR
240	PASSENGER ELECTRIC REAR-VIEW MIRROR
242	DOWNSTREAM OXYGEN SENSOR
243	OIL LEVEL SENSOR
244	WATER INJECTION TEMPERATURE SENSOR
245	EXTERNAL TEMPERATURE SENSOR
247	INSTRUMENT PANEL
257	PREHEATING UNIT
260	PASSENGER COMPARTMENT FUSE BOX AND RELAY
261	RADIO
267	RIGHT REPEATER
268	LEFT REPEATER
272	INJECTION AIR TEMPERATURE SENSOR
299	RELAY CONTROL PLATE
300	REAR CROSSMEMBER COURTESY LIGHT
304	SUNROOF
317	SUNROOF CONTROL
319	AIR CONDITIONING CONTROL PANEL
325	RADIO SATELLITE CONTROL
331	CRUISE CONTROL SWITCH
333	DRIVER'S SEAT BELT SWITCH
338	TURBO PRESSURE REGULATOR
365	RIGHT-HAND TWEETER SPEAKER
366	LEFT-HAND FRONT TWEETER SPEAKER
369	TURBO BEARING COOLANT PUMP
371	PETROL VAPOUR ABSORBER
385	DRIVER'S HEATED SEAT
386	PASSENGER HEATED SEAT
414	WATER IN DIESEL SENSOR
418	PASSENGER COMPARTMENT TEMPERATURE SENSOR FAN
419	AIR CONDITIONING CONTROL UNIT
420	MIXING FLAP
427	ALARM COMPUTER
433	ALARM ULTRASOUND SENSOR
436	TURBO PRESSURE SOLENOID VALVE
438	BONNET SWITCH
442	AUTOSUPPLY ALARM SIREN
449	DIESEL FUEL HEATER RESISTOR
450	DIESEL FUEL HEATER RELAY

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
469	MONITOR CONTROL
475	RECYCLING MOTOR
485	MULTIFUNCTION SWITCH
537	LEFT HEADLIGHT CORRECTOR MOTOR
538	RIGHT HEADLIGHT CORRECTOR MOTOR
541	COURTESY MIRROR LIGHT
560	TAILGATE OPENING CONTROL
567	ELECTRIC COOLANT PUMP
588	DRIVER'S COURTESY MIRROR LIGHT
639	RAISED BRAKE LIGHT
645	PASSENGER COMPARTMENT COMPUTER
653	CLOCK/EXTERNAL TEMPERATURE/CARPHONE DISPLAY ASSEMBLY
662	NAVIGATION COMPUTER
675	CLUTCH PEDAL SWITCH
677	FRONT AND REAR BI-DIRECTIONAL WASHER PUMP
680	PREHEATER PLUG 1
681	PREHEATER PLUG 2
682	PREHEATER PLUG 3
683	PREHEATER PLUG 4
688	OIL LEVEL AND TEMPERATURE SENSOR
692	CAR PHONE CLUSTER
693	CAR PHONE SPEAKER
703	ELECTRIC WINDOW RELAY
746	CYLINDER SENSOR
753	HEADLIGHT WASHER PUMP RELAY
754	HYDRAULIC ELECTRIC INTERFACE
756	AIR BAG/PRETENSIONER COMPUTER
757	DRIVER'S PRETENSIONER
758	PASSENGER'S PRETENSIONER
777	POWER SUPPLY FUSE BOARD
781	RELATIVE PRESSURE SENSOR (AUTOMATIC GEARBOX)
784	COMMAND RELAY BLOCK 2
789	HANDS-FREE MOBILE PHONE MICROPHONE
799	INJECTION AIR FLOW METER
819	AIR FLAP SOLENOID VALVE
822	OPENING REAR WINDOW SWITCH
833	FUEL PUMP AND SENDER UNIT
844	FUEL FILLER FLAP LOCKING MOTOR
845	NO. 2 PASSENGER AIR BAG
854	WINDOWS SIMULTANEOUS CONTROL
886	AERIAL AMPLIFIER
887	UPSTREAM OXYGEN SENSOR
921	ACCELERATOR POTENTIOMETER
953	WHEEL SPEED COMPUTER
971	"DPO" AUTOMATIC GEARBOX MODULE
979	OIL VAPOUR RECIRCULATION HOSE REHEATER
993	ALARM ACTIVE DIODE
997	LPG COMPUTER
1001	LPG TANK
1003	LPG OR PETROL SELECTOR SWITCH
1013	VARIABLE CAMSHAFT
1014	ENGINE COOLING LOW SPEED FAN RESISTANCE
1017	AUTOMATIC TRANSMISSION TURBINE SPEED SENSOR

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1019	EXCHANGER FLOW LOCK-UP SOLENOID VALVE
1023	AIR CONDITIONING FAN OUTPUT MODULE
1028	DRIVER'S SIDE SATELLITE
1029	PASSENGER SIDE SATELLITE
1032	FUEL MANIFOLD PRESSURE SENSOR
1033	PROTECTED POSITIVE BATTERY
1066	FUEL TEMPERATURE SENSOR
1067	ADDITIONAL HEATING RELAY 1
1068	ADDITIONAL HEATING RELAY 2
1071	TURBOCHARGING PRESSURE SENSOR
1076	MOTORISED THROTTLE BODY
1077	CYLINDER 1 PENCIL COIL
1078	CYLINDER 2 PENCIL COIL
1079	CYLINDER 3 PENCIL COIL
1080	CYLINDER 4 PENCIL COIL 4
1081	CRUISE CONTROL LIMITER START STOP CONTROL
1082	KEYLESS VEHICLE CARD READER
1083	KEYLESS VEHICLE FRONT RIGHT HANDLE PRESENCE DETECTOR
1084	KEYLESS VEHICLE FRONT LEFT HANDLE PRESENCE DETECTOR
1085	KEYLESS VEHICLE REAR RIGHT HANDLE PRESENCE DETECTOR
1086	KEYLESS VEHICLE REAR LEFT HANDLE PRESENCE DETECTOR
1087	KEYLESS VEHICLE ENGINE STOP/START CONTROL BUTTON
1088	STEERING COLUMN ELECTRIC LOCK
1094	ANTI-LOCK BRAKING SYSTEM/ELECTRONIC STABILITY PROGRAM COMPUTER
1095	FRONT DRIVER'S SIDE LAP PRETENSIONER
1096	PASSENGER FRONT LAP PRETENSIONER
1097	LEFT-HAND REAR PRETENSIONER
1098	RIGHT-HAND REAR PRETENSIONER
1099	LEFT-HAND REAR SIDE AIR BAG
1100	RIGHT-HAND REAR SIDE AIR BAG
1101	DRIVER'S HEAD SIDE AIR BAG
1102	PASSENGER'S HEAD SIDE AIR BAG
1103	FRONT DRIVER'S SIDE CHEST AIR BAG
1104	FRONT PASSENGER'S SIDE CHEST AIR BAG
1105	FUEL FLOW ACTUATOR
1106	ESP ON/OFF BUTTON
1107	CLUSTER SENSOR
1109	MANUAL GEARBOX NEUTRAL SENSOR/REVERSING LIGHTS
1111	INSULATION SENSOR
1113	ADDITIONAL PASSENGER COMPARTMENT HEATING
1115	WEIGHT DISTRIBUTION MOTOR
1118	FRONT PASSENGER FOOTWELL LIGHT
1119	DRIVER'S FOOTWELL LIGHT
1120	PASSENGER'S SIDE REAR PASSENGER FOOT LIGHT
1121	DRIVER'S SIDE REAR PASSENGER FOOT LIGHT
1125	CENTRAL COMMUNICATION UNIT
1127	VIDEO DISPLAY
1129	SEQUENTIAL GEARBOX GEAR LEVER DISPLAY
1130	DRIVER'S FRONT SEAT POSITION SENSOR
1153	OPENING REAR WINDOW OPENING CONTROL
1155	ACCESSORIES RELAY 1
1156	PASSENGER COMPARTMENT FAN ASSEMBLY 1
1173	ADDITIONAL HEATING RELAY CONTROL COMPUTER

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1186	LIQUEFIED PETROLEUM GAS EXPANSION VALVE SOLENOID VALVE.
1195	LPG PRESSURE SENSOR
1196	LPG PETROL PUMP CUT-OFF RELAY
1202	COOLANT GAS PRESSURE SENSOR
1212	INJECTOR 1
1213	INJECTOR 2
1214	INJECTOR 3
1215	INJECTOR 4
1232	ELECTRIC POWER ASSISTED STEERING SYSTEM
1249	DRIVER'S ADAPTIVE FRONT AIR BAG
1259	GAS SOLENOID VALVE SENSOR
1265	CAMSHAFT INLET SENSOR
1272	CD CHANGER
1287	PARTICLE FILTER UPSTREAM TEMPERATURE SENSOR
1288	PARTICLE FILTER DOWNSTREAM TEMPERATURE SENSOR
1290	PARTICLE FILTER DIFFERENTIAL PRESSURE SENSOR
1303	VIDEO SCREEN RETRACTION UNIT
1322	TAILGATE LOCK
1334	COURTESY MIRROR LIGHT CONTROL
1337	SWITCHING PROTECTION UNIT
1338	HEADLIGHT WASHER PUMP RELAY 2
1340	INTERNAL REARVIEW MIRROR
1371	TDC SENSOR
1372	REAR HEIGHT SENSOR
1373	FRONT HEIGHT SENSOR
1374	DRIVER'S DOOR HANDS-FREE CARD DETECTION AERIAL
1375	PASSENGER FRONT DOOR HANDS-FREE CARD DETECTION AERIAL
1376	DRIVER'S SIDE REAR DOOR HANDS-FREE CARD DETECTION AERIAL
1377	PASSENGER RR DOOR HANDS-FREE CARD DETECTION AERIAL
1378	TAILGATE HANDS-FREE CARD DETECTION AERIAL
1385	STEERING WHEEL WARNING CONTROL
1390	HEADLIGHT ADJUSTMENT RHEOSTAT SWITCH
1391	CENTRAL LOCKING / HAZARD WARNING LIGHTS SWITCH
1392	DRIVER'S DOOR LOCKING MICROSWITCH
1393	PASSENGER DOOR LOCKING MICRO SWITCH
1394	LEFT-HAND REAR DOOR LOCKING MICRO SWITCH
1395	RIGHT-HAND REAR DOOR LOCKING MICRO SWITCH
1396	FRONT INTERIOR HANDS-FREE CARD DETECTION AERIAL
1397	REAR INTERIOR HANDS-FREE CARD DETECTION AERIAL
1398	CENTRAL INTERIOR HANDS-FREE CARD DETECTION AERIAL
1409	BOOT LID LOCKING MICRO SWITCH
1415	RAIN / LIGHT SENSOR
1441	PASSENGER AIR BAG DISABLING KEY
1457	LPG TANK RELAY
1460	MOTORISED EGR SOLENOID VALVE
1461	AIR INTAKE FLAP
1474	PRESSURE / AIR TEMPERATURE SENSOR
1475	TURBOCHARGER CONTROL SOLENOID VALVE
1476	RIGID BONNET COMPUTER
1477	BOOT DOOR LOCKING MOTOR ON RIGHT-HAND ROOF SIDE
1478	BOOT DOOR LOCKING MOTOR ON LEFT-HAND ROOF SIDE
1479	BOOT SEPARATOR POSITION SENSOR
1480	RIGHT-HAND ROOF LOCK SENSOR

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1481	LEFT-HAND ROOF LOCK SENSOR
1482	RIGID ROOF SWITCH
1484	BOOT DOOR SOLENOID VALVE
1485	RIGID ROOF SOLENOID VALVE
1486	ROOF HYDRAULIC PUMP
1487	HYDRAULIC PUMP RELAY
1488	BOOT HYDRAULIC CYLINDER SENSOR
1489	ROOF HYDRAULIC CYLINDER SENSOR
1490	GLOVEBOX LOCK MOTOR
1511	DRIVER'S REAR TWIN ELECTRIC WINDOWS CONTROL
1512	DRIVER'S FRONT TWIN ELECTRIC WINDOWS CONTROL
1513	RIGHT-HAND HEATED SEAT CONTROL
1514	LEFT-HAND HEATED SEAT CONTROL
1519	UNDER STEERING WHEEL CONTROLS
1520	FRONT RIGHT-HAND FLAP LIGHT SWITCH
1521	FRONT LEFT-HAND FLAP LIGHT SWITCH
1524	BRAKE LIGHTS ON RELAY
1543	LEFT-HAND MOBILE ROOF ARCH CASSETTE
1544	RIGHT-HAND MOBILE ROOF ARCH CASSETTE
1545	RETURN SENSOR
1548	DRIVER'S FR LAP-BELT PRETENSIONER + INTEGR AIRBAG
1549	FRONT PASSENGER ACTIVE ANTI-SUBMARINING (ANTI-SUBMARINING AIRBAG)
1589	TURBO UPSTREAM TEMPERATURE SENSOR